

# Filtration for Soft Drink Ingredients

## Filters for Soft Drink Ingredients

Ingredients used in soft drinks can be from either internal or external sources. Regardless of the source, bottlers treat all ingredients as if they contain some form of contamination that might harm production processes and/or product quality.

The biggest issue with ingredients from outside sources is the unknown nature of the possible contamination. Even if the source of the ingredient has a reputation for quality and consistency, operators should guard against all possible scenarios. That means the possibility of unwanted particles, bacteria or other microorganisms and chemical contamination. While cartridge filters cannot address possible chemical issues, they are a cost-effective method of controlling and removing unwanted particles and microorganisms. Assuring that the ingredients entering the bottling process are pure can only help process efficiency and improve product quality.

## Filtration Goals

The abbreviated schematic in Figure 1 highlights the filters used for ingredient filtration before the ingredients enter the rest of the mixing and bottling process. These filters are designed to remove particles and microorganisms and also protect the ingredients from environmental contaminants while they are stored in tanks.

There are many possible filter configurations, and the actual filter systems used will depend on the contaminants that are known to occur in specific ingredients. The filters shown perform the basic functions needed to remove contaminants from any soft drink ingredients.


The filters highlighted in Figure 1 perform three functions, particle control, microorganism and small particle control, and tank contents protection.

## Filters for Particle Control

Unwanted particles in any ingredients could be almost any size. Larger particles, those larger than 1 to 5 microns, are easily removed using depth filtration.

Depth media in cartridge filters is found in two forms. The standard depth filter is a self-supporting tube made using a polymer, most often polypropylene. The tube is formed using the melt-blown or nano-spun process.

The other form of depth filter uses pleated flat sheet media, most often made with polypropylene or fiberglass. Polypropylene is the most widely used material for water and chemical filtration, but fiberglass has better filter efficiency and generally allows higher flows and throughput than polypropylene in most applications.

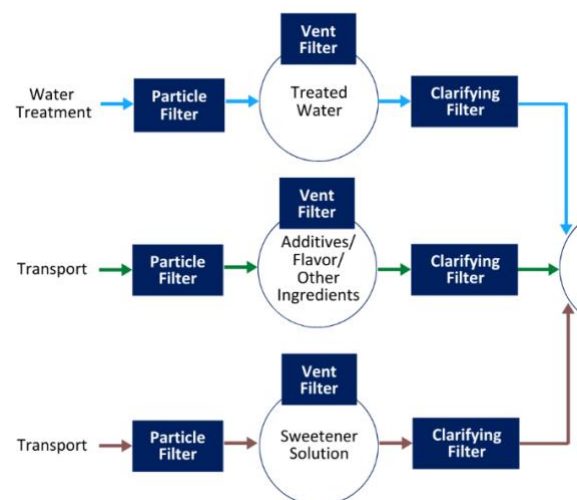

Standard depth filters will capture a range of particle sizes through the thickness of the media. Pleated media filters have the advantage of a large surface area that can hold a higher quantity of particles on that surface than the standard depth filters

## Filters for Bioburden and Small Particle Control

The next level of filtration for ingredients is removal of smaller particles and some bacteria or other organisms. This process of “bioburden control” is performed by membrane-based filters. The filter performance requirements are determined by the level of particle and microorganism purity required by the rest of the process. If the process requires only a reduced bioburden load, then a filter with pore size rating of 0.45, 0.65 or even 0.85 microns might be used, based on what is believed to be in the ingredients. However, if a process requires that an ingredient be “bacteria-free”, then the filter pore size will probably be 0.22 microns or perhaps even 0.10 microns.

## Tank Vent Filters

The tanks used in production systems, even tanks made of stainless steel, are not designed for elevated pressure or vacuum. Either will cause structural bulging or tank implosion. That is why air is allowed to flow into and out of the tank during emptying or filling, to avoid pressurizing the tank or causing a vacuum condition. The air or gas entering the tank is filtered to prevent environmental particles and bacteria from contaminating the liquid inside the tank. Figure 1 on the previous page shows the tank vent filters on the tops of tanks.

Filters used for liquid applications are usually made of materials that attract water – are ‘hydrophilic’ – and allow the easy flow of liquids through the media or membrane. For air filtration, it is critical that the media remain dry. If the media becomes wet and the pores are filled with liquid, then the required air flow is restricted and the pressure or vacuum inside the tank can reach critical levels and cause tank failure. The various media used for air filters are ‘hydrophobic’ – they repel water – and resist wetting from water vapor.

As with the bioburden control filters, vent filter performance targets are determined by operating conditions and expected contaminants. Most vent filters are designed to prevent bacteria, molds and wild yeasts from entering the tanks, so the pore sizes are usually 0.22 microns.

## Choosing the Right Filters

The Critical Process Filtration Technical Services team can assist in evaluating your winemaking filtration needs, and conduct testing as necessary to identify the optimal solution for your process. Filtration recommendations will be made based on fluid compatibility, flow rate requirements, process sanitation and sterilization methods, removal requirements and test data from our Applications Lab. Testing can also be performed at your facility if your wine is not amenable to shipping.



One Chestnut Street  
Nashua, NH 03060  
603.880.4420  
FAX: 603.880.4536

[CriticalProcess.com](http://CriticalProcess.com)

The information contained herein is subject to change without notice. The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc. Viton is a trademark of DuPont Performance Elastomers L.L.C.  
© 2025 Critical Process Filtration, Inc. • All Rights Reserved

Application Summary • Filters for Soft Drink Ingredients Rev -