

# GGD Cartridge Filters

## Pleated Fiberglass Depth Media



General Service Grade Pleated Fiberglass Depth Filter Cartridges are designed for general purpose use wherever a cost effective pleated depth filter is required. With 99% efficiencies at the rated pore size, GGD filters are designed to hold the maximum amount of filter media that can be completely and effectively used, thus lowering the cost of filtration. GGD cartridges are flushed with high purity water to remove potential extraneous manufacturing debris. Priced below special purpose cartridges, GGD cartridges are manufactured with the same careful attention to both quality and performance.

### Construction Materials

<b>Filtration Media</b>	Pleated Fiberglass Depth Media
<b>Media Support</b>	Polyester
<b>End Caps</b>	Polypropylene
<b>Center Core</b>	Polypropylene
<b>Outer Support Cage</b>	Polypropylene
<b>Sealing Method</b>	Thermal Bonding
<b>O-rings</b>	Buna, Viton® (or FKM), EP, Silicone, FEP Encapsulated Silicone, FEP Encapsulated Viton (or FKM)

### Applications

- ◆ Specialty Chemicals
- ◆ Acids & Bases
- ◆ Inks & Dyes
- ◆ Air
- ◆ Process Water

### Dimensions

<b>Length</b>	5 to 40 in. (12.7 to 101.6 cm) nominal
<b>Outside Diameter</b>	2.75 in. (7.0 cm) nominal
<b>Filtration Area</b>	5.8 ft <sup>2</sup> (0.54 m <sup>2</sup> ) per 10 in. length (Average - area varies with media thickness and porosity)

### Maximum Operating Parameters

<b>Differential Pressure</b>	
• Forward	50 psid (3.4 bard) at 20 °C (68 °F)
• Reverse	40 psid (2.7 bard) at 20 °C (68 °F)
<b>Operating Temperature</b>	82 °C (180 °F) at 10 psid (0.69 bard) in water
<b>Recommended Changeout Pressure</b>	35 psid (2.4 bard)

### Sanitization/Sterilization

<b>Filtered Hot Water</b>	90 °C (194 °F), 30 minutes, multiple cycles, max 3 psid forward flow
<b>Autoclave</b>	121 °C (250 °F), 30 min, multiple cycles
<b>In-line Steam</b>	135 °C (275 °F), 30 min, multiple cycles

For all elevated temperature procedures above, a stainless steel support ring is required.

#### Chemical Sanitization

Performed using industry standard concentrations of hydrogen peroxide, paracetic acid, sodium hypochlorite and other selected chemicals.

### Total Performance

Critical Process Filtration, Inc. is a vertically integrated manufacturer of filtration products to industries in which filtration is considered a critical part of the manufacturing process. We supply a complete line of products and services to help you cost effectively satisfy all your filtration requirements from a single source.

## FDA and EC Compliance

All Critical Process Filtration cartridge filters are designed to meet the FDA requirements for processing food and beverage products. The materials used to construct food & beverage grade filters are listed by the FDA as appropriate for use in articles intended for repeated food contact as specified in Title 21 CFR sections 174.5, 177.1500, 177.1520, 177.1630, 177.2440 and 177.2600 as appropriate. All materials used to make the filters are listed in European Commission Regulation EU/10/2011, Annex 1.

## Extractables

GGD filters typically exhibit low levels of non-volatile residues.

## Flow Rate


The Typical Flow Rates table represents typical water flow at a 1 psid (69 mbar) pressure differential across a single 10 in. cartridge element. The test fluid is water at ambient temperature. Extrapolation for housings with multiple elements and higher pressure drops is acceptable, but as flows increase the pressure drop of the housing becomes more apparent.

### Typical Flow Rates

Pore Size	0.22 µm	0.30 µm	0.45 µm	0.65 µm	1.0 µm	2.0 µm	3.0 µm	5.0 µm	10 µm	20 µm	30 µm
<b>GPM</b>	2.6	3.0	5.0	6.0	8.0	10	12	14	15	> 15	> 15
<b>LPM</b>	9.84	11.35	18.92	22.71	30.28	37.85	45.42	52.99	56.78	56.78	56.78

## Ordering Information

Cartridge order numbers have several variables from pore size to end cap type. For example, General Service Grade Pleated Fiberglass Depth Media, 1.0 Micron Rating, No SS Support Ring, 20" Length, Silicone O-Rings, 213/119 Internal O-Ring/Plug End Cap Configuration = GGD1-0N00002S4.

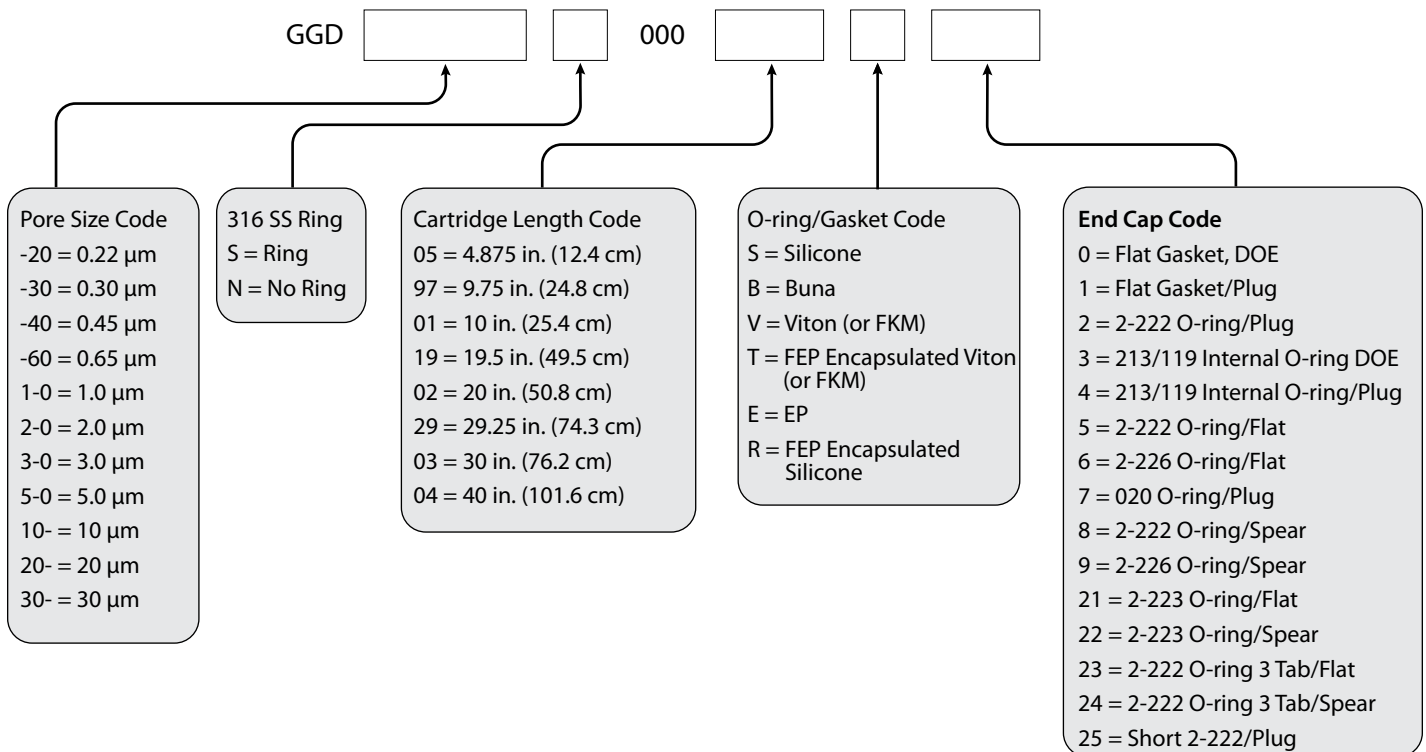

Request a **QUOTE** from your area representative



### Critical Process Filtration, Inc.

One Chestnut Street • Nashua, NH 03060  
Tel: 603.880.4420 • Fax: 603.880.4536

[criticalprocess.com](http://criticalprocess.com) • [sales@criticalprocess.com](mailto:sales@criticalprocess.com)

The information contained herein is subject to change without notice.

The Critical Process Filtration logo is a trademark of Critical Process Filtration, Inc.

Viton is a trademark of DuPont Performance Elastomers L.L.C.

© 2012-2015 Critical Process Filtration, Inc. • All Rights Reserved • Data Sheet GGDD51011 Rev-